

TRIMBLE AUTOPILOT WITH FMX DISPLAY

Getting Started

*Note: **HOME SCREEN**, **SETTINGS SCREEN** & **RUN SCREEN** Icons are all located in the top R/H corner of the screen. The top Icon is always **HOME**. The middle Icon is **SETTINGS** and the bottom Icon is **RUN**.*

1. From the **HOME** Screen, tap the **SETTINGS** Icon.
2. Make sure that the correct Implement is selected. If not, enter it, or change it here.
3. Tap the **RUN** Screen Icon – The **FIELD SELECTION** Screen will appear. Select or enter the CLIENT, FARM, FIELD & EVENT information, as needed, then press **OK**. The **RUN** Screen will appear.
4. Press the **SWATHS** Icon (lower R/H corner) and the **SWATH MANAGEMENT** Screen will appear.
5. Select your Swath type. Eg. **AB line**, **Headland** or enter an **A+ Heading**. You can also select a **FREFORM** line from the top row of tabs. If you have previously saved swaths, they will also appear. After a Swath is selected, an Icon will appear in the lower r/h corner of the screen – press it.
6. When returned back to the **RUN** Screen, use **SET A & SET B** Icons to set an AB Line.
7. If a Free-Form swath was selected, use the **FREFORM** Icon to start and finish a Free-Form curve, or you can use the **SET A & SET B** Icons to set a regular straight AB Line in the same field.
8. Use the **ENGAGE** Icon, or the Remote Engage button on the Armrest to engage as required. *Please note- the armrest button is the preferred method. To use this button, it must be held in for a minimum of ½ a second, but no longer than 4 seconds.
9. Tap the **NAV II Controller** Icon (Picture of silver control unit) to display the **Aggressiveness & Trim** adjustments. Increase Aggressiveness if machine is slowly weaving & decrease if too jerky. Use trim to fine tune the position of the machine on the line (Move left of right).
10. Use the **Skip** Icon (next to **Swaths** Icon) to move your lines over a set amount, or to your current position.